

8,12,16 Line Intercom System

Ver: ICT-04

Intercom Features:

- | | |
|--|--|
| <ul style="list-style-type: none">• Programmable Intercom Number.• Extension to Extension Communication.• Extension to operator Communication.• Caller I.D display for Operator• More than one Master Tel. set for reception.• Multiple Voice Path. | <ul style="list-style-type: none">• Tone / Pulse Dialing.• Emergency / Security Alarm.• Door Phone and Door Lock Interface.• Door Bell Ringing.• Complete Privacy.• 220 V AC INPUT. |
|--|--|

Operating Instructions

Extension Dialing	21,22,23------(Default) or Dial Fedded Number.
Door Phone Access	Dial '8' from any Extension.
Door Lock Open	Dial '5' after Dialing '8'.
Emergency Alarm ON	Dial '98' from any Extension.
Emergency Alarm OFF	Dial '98' from Operator Extension.

Configuration:

1. Set all Links as required based on given chart 'A'.
2. For 8 and 12 line system, 9th & 13th line fixed for Doorphone.
3. For 16 Line System, 16th line can be used as an ext. or Doorphone depends on link #6.

Programming:

Note: Use 1st ext. for Programming.

- Jumper Setting:**
- a. Keeping Link (J4) closed.
 - b. Keeping Link (#8th of header) closed.

Doorbell Ring Assign: Dial 95 E1 E1 E2 E2ⁿ
Example: '95 01 05'ⁿ

Doorbell will ring on 1st & 5th ext. simultaneously.

Apartment Number Programming:

Dial 999 01 D1 D1 D1 D2 D2 D2ⁿ

Example: 999 01 101, 102,.....ⁿ 3 Digit Dialing.

999 01 or 21, 22, 23,.....ⁿ 2 Digit Dialing.

Special Group Programming:

Dial 96 E1 E1 E2 E2 F2.....ⁿ

Example: 95 01 02 07 08 12.....ⁿ

8,12,16 Line Intercom System

Ver: ICT-04


INSTALLATION:

- Locate the point where all wiring terminates.
- Hang the system on wall through two screws
Use template paper for screw marking.
- Unscrew the lower cover to connect cable at terminals.
- Supply the power 220V AC to the system.

Link Setting (Chart A)

Link Number	Facility	
1	2 Digit / 3 Digit	Close/Open
2	Operator	0 2 - Close 3 - Close
3		1 2 - Open 3 - Close
		2 2 - Close 3 - Open
	3 2 - Open 3 - Open	
4	Door Lock	Open
	Emergency Alarm	Close
5	Communication Mode All / Only	Open / Close
6	Ext / D.PH	Open / Close
7	Operator Status Different / Hunting	Close / Open
8	Programme	Close / Open
J4	Enable / Disable	

16 Line Intercom Mounting Hole

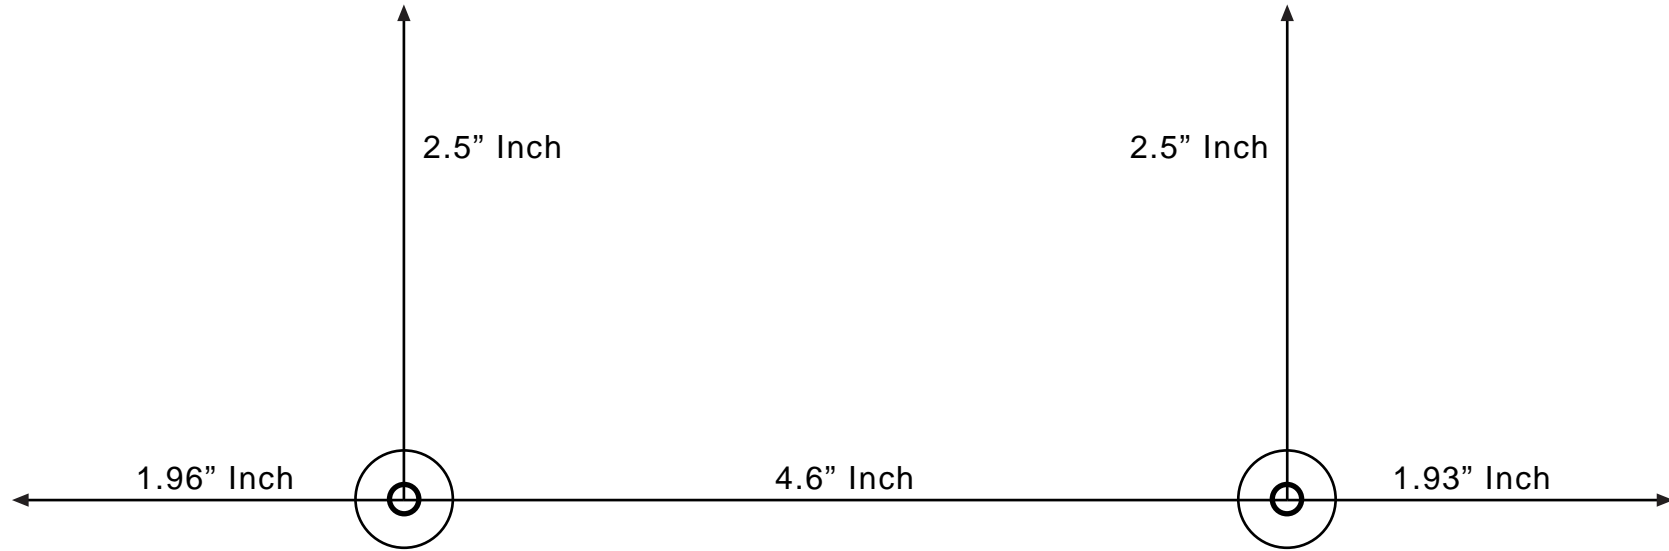

16 Line Intercom Mounting Hole

